





[1] Workspace





[2] Exposed access to the inner space of the left wheel arch.

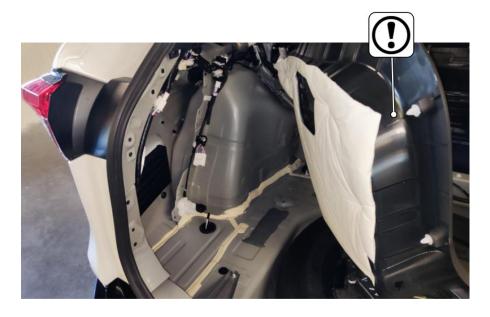



Carefully remove the plastic cover side at least as shown in the photo. Keep an eye to all the snaps around the perimeter of the fixing and to the screw under the eyelet bracket on this wall.







[3] Connection of WH1R cable harness.



Factory connector for connection of the main plug WH1R cable-harness.

[4] Finding the FOG light wire.





You will need by yourself to locate and identify the fog lamp wire (white and red - in the wires going up to the tailgate) and connect the blue wire from the WH1R cable-harness to it.







Connections description in trailer socket G8

